



## PCB drilling patterns


0F.302

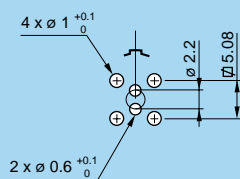


0F.303

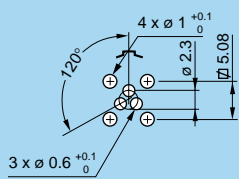


0F.304

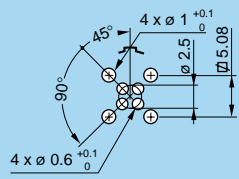


0F.305

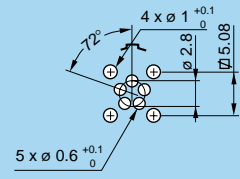


1F.303

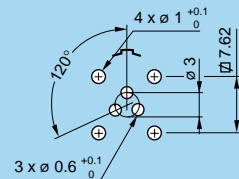


1F.305

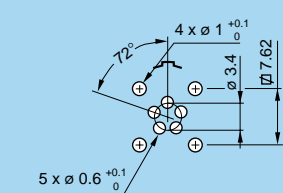


1F.307

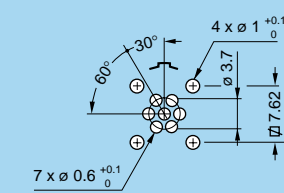


1F.308

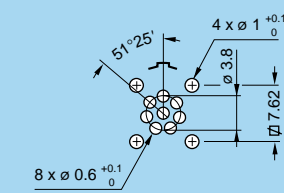


2F.308

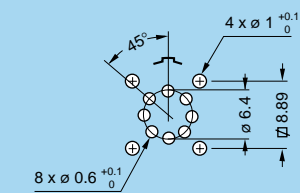


2F.310

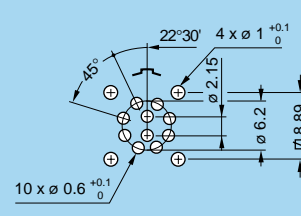


2F.312

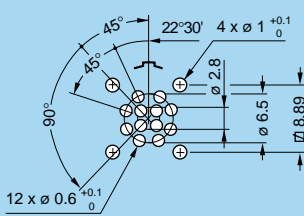


2F.319

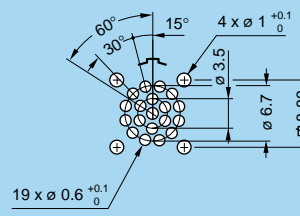


3F.322

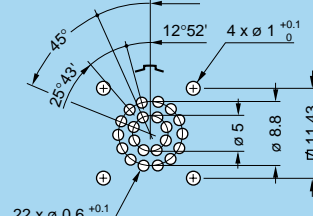


3F.330

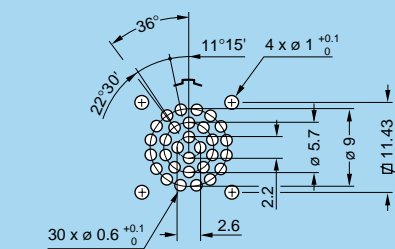


4F.340

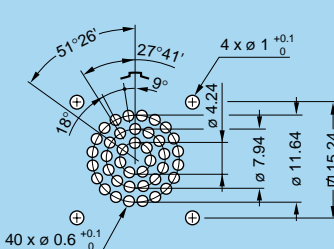


5F.350

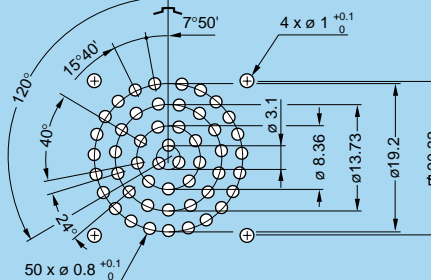


5F.354

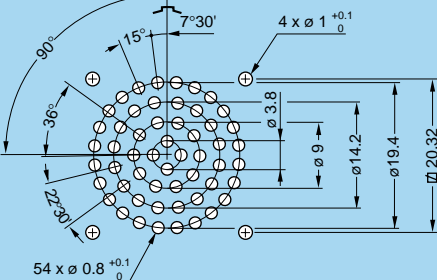

5F.355

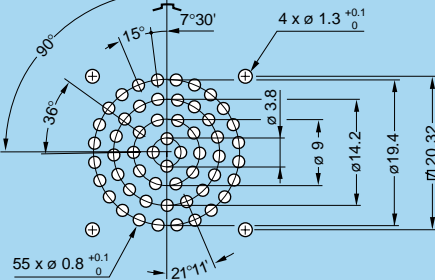

5F.364

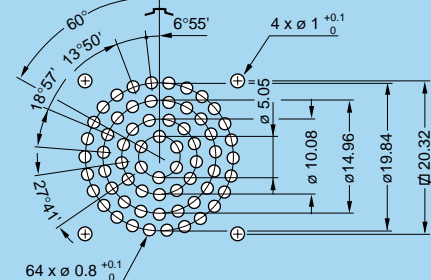

5F.366

